

> **AGGIORNA A WINDOWS® 7**
NOTEBOOK TOSHIBA IDONEI

NOTEBOOK		NOTEBOOK	
		Numeri di prodotto (model n°) che iniziano con	
SATELLITE		SATELLITE PRO	
Satellite U400	PSU44E	Satellite Pro U400	PSU45E
Satellite U400D	PSU48E	Satellite Pro A300	PSAG9E
Satellite A300	PSAG8E		PSAGDE
	PSAGCE	Satellite Pro L350	PSLD9E
Satellite A300D	PSAH8E	Satellite Pro L300	PSLB9E
	PSAHCE	Satellite Pro L300D	PSLC9E
Satellite L350	PSLD8E	Satellite Pro P300	PSPC9E
	PSLDCE		PSPCDE
Satellite L350D	PSLE8E	Satellite Pro P300D	PSPD9E
Satellite L300	PSLB8E		PSPDDE
Satellite L300D	PSLC8E	Satellite Pro S300	PSSB0E
Satellite P300	PSPC8E	Satellite Pro S300L	PSSD1E
	PSPCCE	QOSMIO	
Satellite P300D	PSPD8E	Qosmio X300	PQX32E
	PSPDCE	Qosmio X300	PQX31E
Satellite A350	PSALWE	Qosmio G50	PQG55E
	PSAL6E	TECRA	
Satellite A350D	PSALEE	Tecra A10	PTSB0E
	PSALME		PTSB1E
Satellite L500/L505	PSLJ0E	Tecra S10	PTSB3E
	PSLJ3E	Tecra M10	PTMB0E
Satellite L500D/L505D	PSLK0E		PTMB1E
	PSLK3E		PTMB3E
Satellite A500	PSAM0E		PTMBBE
	PSAM3E	Tecra R10	PTRB0E
Satellite A500D	PSAN0E		PTRB1E
	PSAN3E		PTRB3E
Satellite U500	PSU52E	PORTÉGÉ	
	PSU5EE	Portégé R600	PPR60E
Satellite L550/L555	PSLN0E		PPR61E
	PSLN8E	Portégé A600	PPA61E
Satellite L550D/L555D	PSLNJE		PPA60E
	PSLNSE	Portégé M750	PPM75E
		Portégé M800	PPM81E